
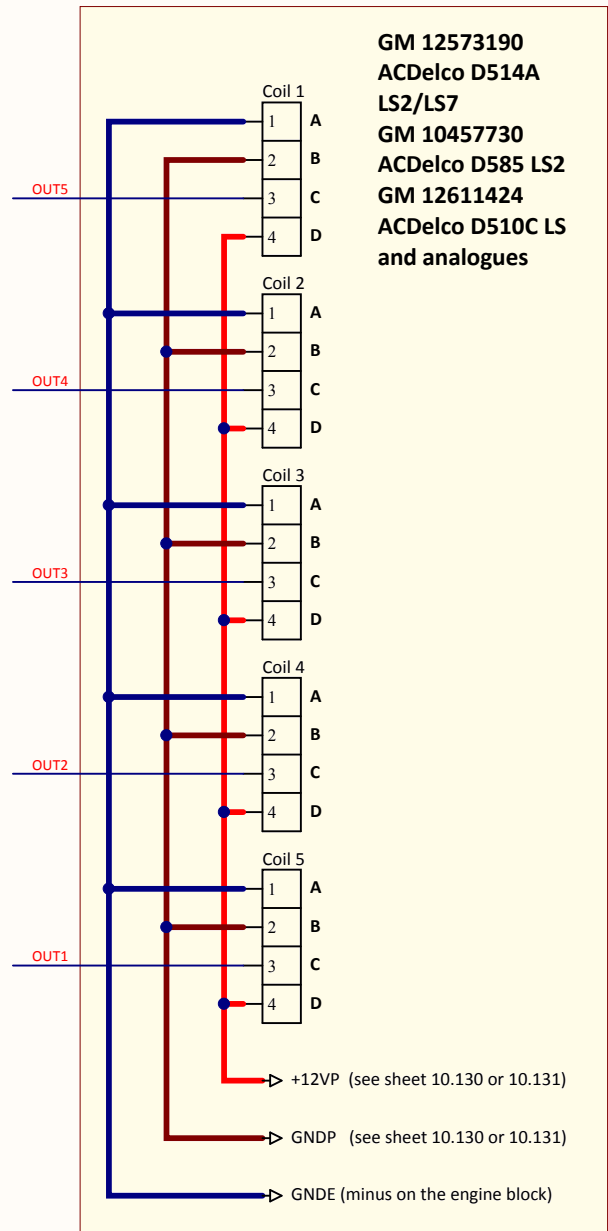


Sheet 10.132 Connection diagram of individual coils for ECU EC61.

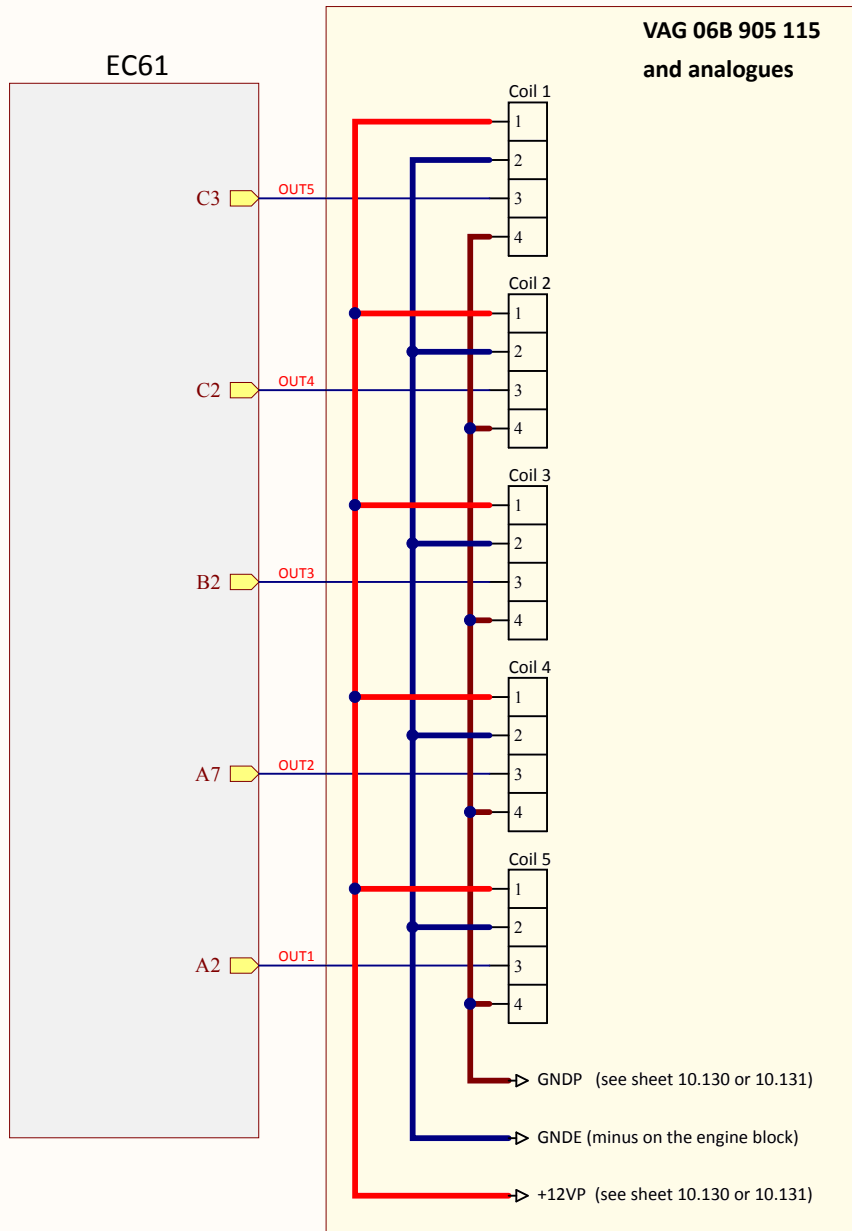

Numbers of universal outputs and number of coils, determined by the configuration settings in the ECar manager program. See help for ECar manager.

+12V, GNDE, GNDP connect with a wire of at least 1.5 sq.

Connect Out1...Out5 with a wire of at least 0.5 sq.

